




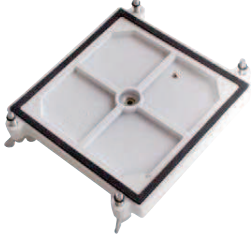




Prior to servicing the filters, ensure that the unit is OFF.

<p><b>Step 1</b> Shut off the fuel supply valve and isolate unit before servicing the filter.</p> 	<p><b>Step 2</b> Loosen the lid screws evenly.</p> 
<p><b>Step 3</b> Remove the lid.</p> 	<p><b>Step 4</b> Take out the spring cassette.</p> 
<p><b>Step 5</b> Lift out filter element by the handle. Replace with new filter element and re-fit the spring cassette.</p> 	<p><b>Step 6</b> Inspect lid gasket. Replace if necessary.</p> 
<p><b>Step 7</b> Fit lid checking for correct positioning. Evenly tighten in the sequence shown (refer to Technical Specifications for torque values).</p> 	<p><b>Step 8</b> Open the fuel supply valve, prime fuel system and check for leaks.</p> 

### Replacement Filter Element

Element #	Description
01810	10 Micron
01830	30 Micron (Standard)
01860S	60 Micron (Stainless Steel)